


Windmaster Connection Diagram (With Wind Sensor and GPS Input)

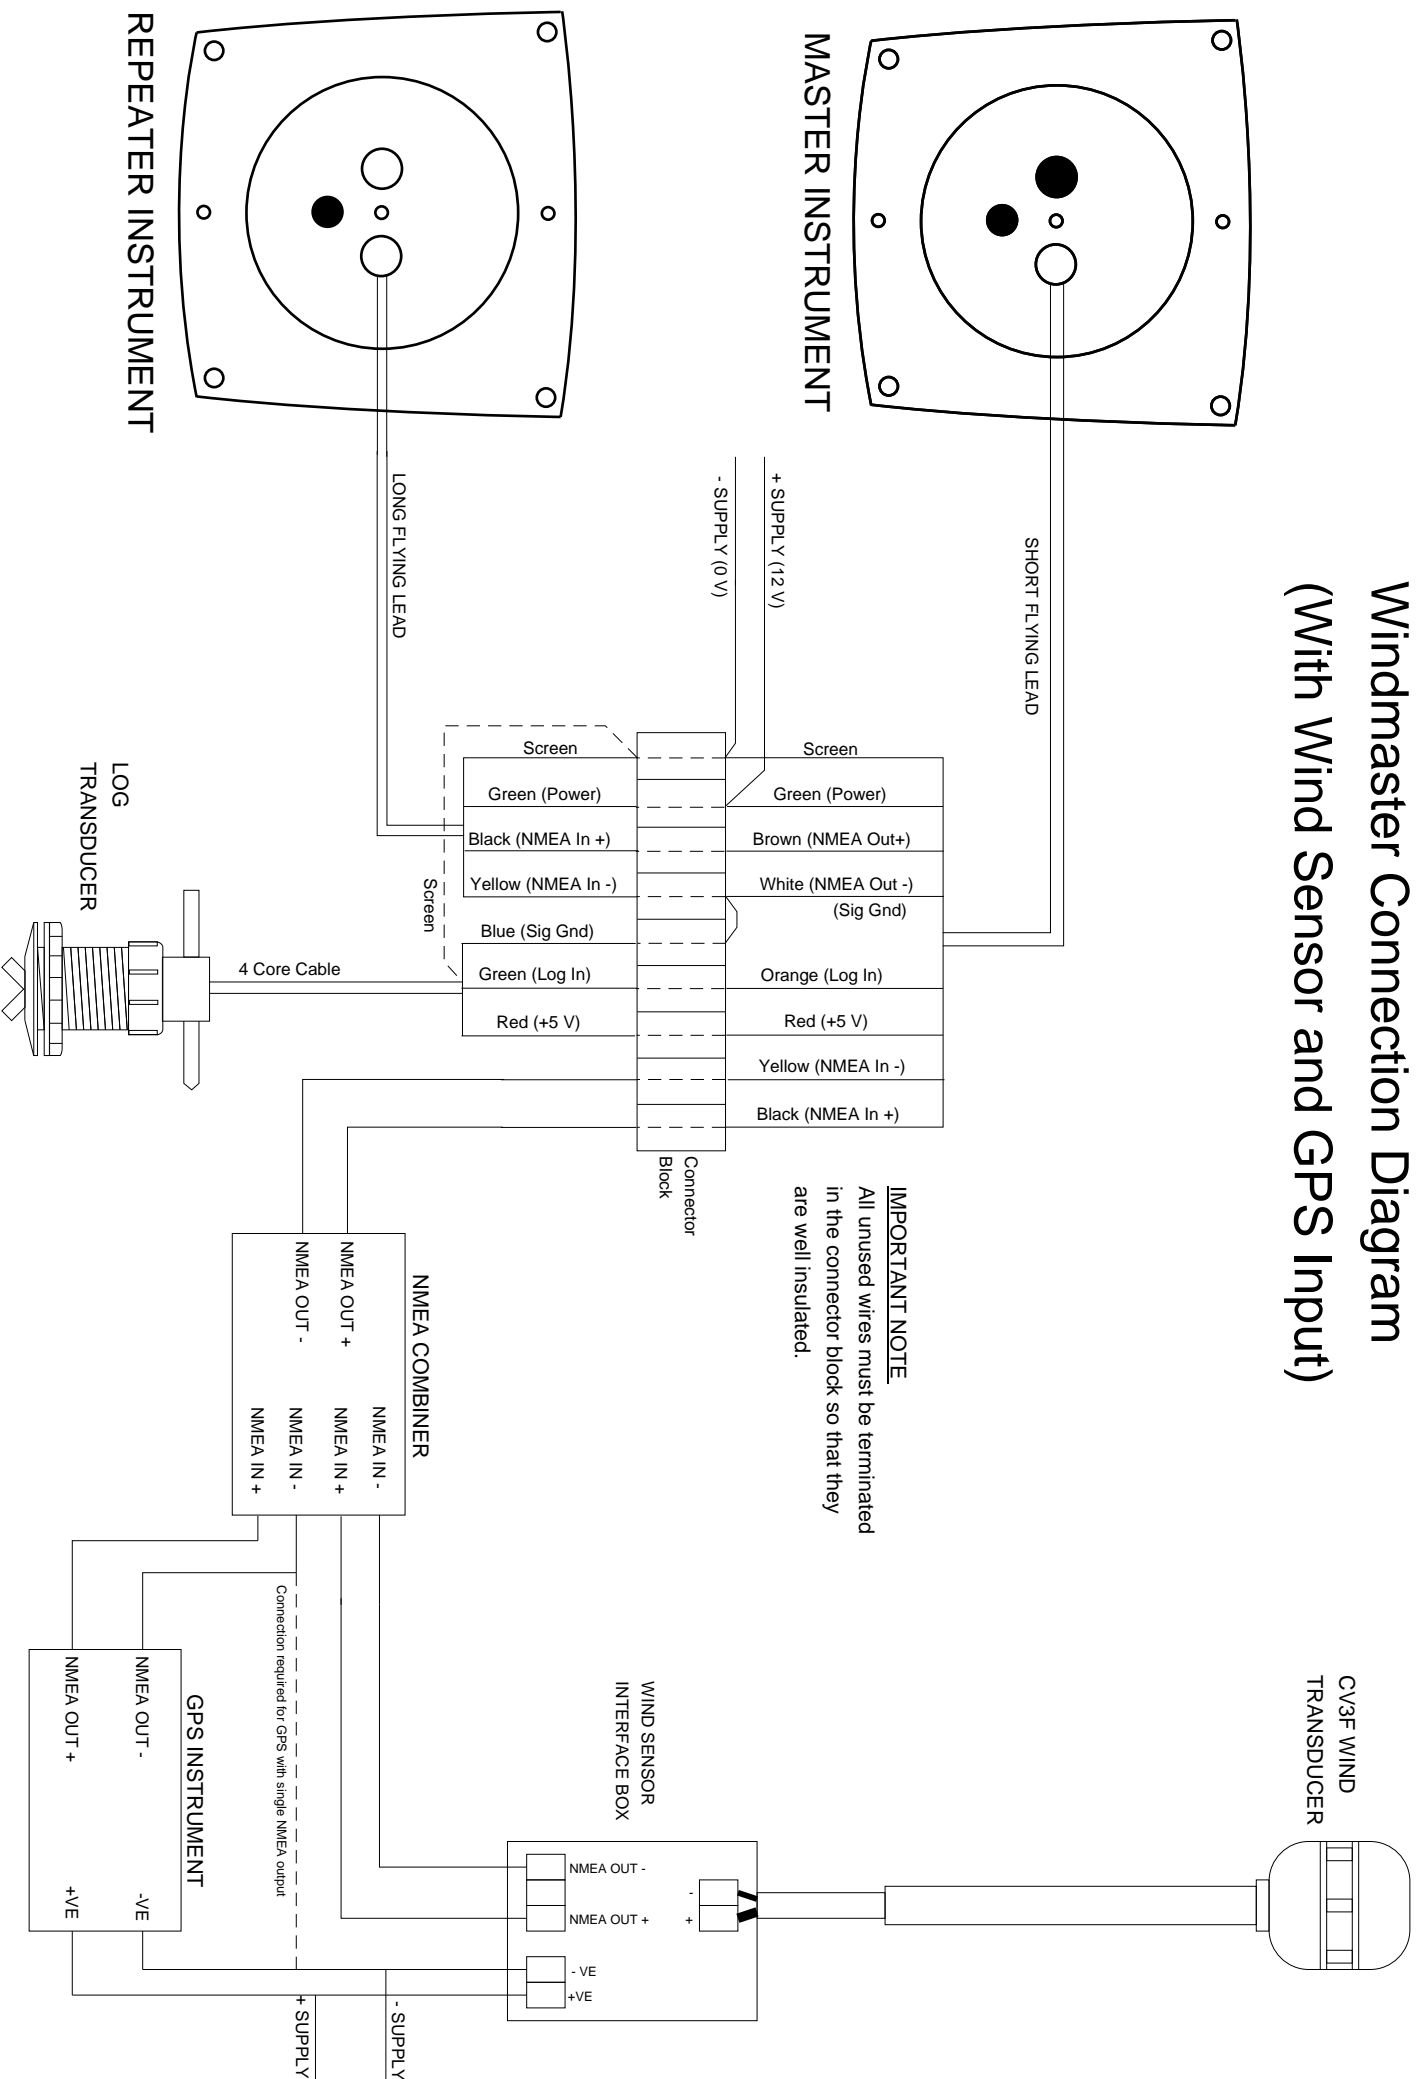

IMPORTANT NOTE
All unused wires must be terminated in the connector block so that they are well insulated.

Connection required for GPS with single NMEA output.